

Instruct your customer to read their ATC Owner's Manual!

Remote Engine Start (RES) Key Fob Instructions*:

- Press the **Lock** button twice
- Press and hold the **START** button
- Press the **UNLOCK** button once
- Follow the ATC Key Fob instruction below

*RES is not available on the Work Truck (WT) Trim Level

*RES is Available on all LS, LT, LTZ GM Trim Levels



ATC Key Fob Instructions:

1. To open the door press and hold the **OPEN** button
2. To close the door, press and hold the **CLOSE** button
3. To bring the lift up and in press and hold the **IN** button
4. To bring the lift out and down press and hold the **OUT** button



To Exit & Open the ATC Gullwing Door Ensure:

- Vehicle hand brake is not pressed
- Disconnect the seat belt connection
- Ensure the vehicle is in the “park” position



Sales Support (855) 324-3085
Technical Support (877) 291-6309

Gullwing Conversions

